

FIPS 140-2 Level 3 Non-Proprietary Security Policy

NITROXIII CNN35XX-NFBE HSM Family

Document number: CNN35xx-NFBE-SPD-L3

Document Version: Version 2.20.1 Revision Date: 09/17/2020

© Copyright 2020 Marvell

ALL RIGHTS RESERVED

This document may be reproduced only in its original entirety [without revision].

Revision History

Revision	Date	Author	Description of Change	
1.0	08/26/2015	Phanikumar Kancharla	Initial CMVP Submission	
1.1	11/24/2015	Phanikumar Kancharla	Addressed CMVP comments	
2.0	9/30/16	Phanikumar Kancharla	FW-2.0 feature updates	
2.0.1	12/14/2016	Phanikumar Kancharla	Updates with Pre-CO role	
2.0.2	1/4/2017	Phanikumar Kancharla	Minor Updates to Tables 4 and 5 per CMVP Comments	
2.0.3	2/7/2017	Phanikumar Kancharla	FW update to build 68	
2.0.4	2/27/2017	Phanikumar Kancharla	FW update to build 69	
2.0.5	3/30/2017	Phanikumar Kancharla	FW update to build 74	
2.0.6	7/26/2017	Phanikumar Kancharla	FW update to 2.0.3 build 10	
2.0.7	8/24/2017	Biju Abraham	FW update to 2.0.3 build 13	
2.0.8	11/07/2017	Phanikumar Kancharla	FW update to 2.03 build 20	
2.1.0	1/25/2018	Phanikumar Kancharla	Enabling RSA keywrap interfaces to the users	
2.04.04	4/18/2018	Phanikumar Kancharla	Exposed HMAC KDF services and added AES GCM keywrap service.	
2.04.17	7/1/2018	Phanikumar Kancharla	Addressing CMVP comments	
2.05.11	8/10/2018	Phanikumar Kancharla	Auditlog enhancements and bug fixes	
2.05.13	9/6/2018	Phanikumar Kancharla	Nitrox Core hang detect/recover changes, backward compatibility changes, and miscellaneous bug fixes.	
2.11	1/10/2019	Phanikumar Kancharla	HSM Time drift fix, find key bug fix and perf optimizations. FW update to 2.04 build 32	
2.12	4/1/2019	Phanikumar Kancharla	Added Hardware rev2 specific changes and miscellaneous bug fixes; added FW update to 2.04 build 44	
2.13	5/29/2019	Phanikumar Kancharla	FW update to 2.04 build 48 to address CVEs	

2.14	6/11/2019	Phanikumar	Addressing CMVP comments.
		Kancharla	
2.15	6/20/2019	Phanikumar	FW update to 2.04 build 49 to block older
		Kancharla	firmware updates
2.16	7/10/2019	Phanikumar	Update to include only FW 2.04 builds 48 and 49
		Kancharla	
2.17	7/18/2019	Phanikumar	FW update to add 2.05 build 15 to address CVEs;
		Kancharla	Table 7 updated
2.18	11/7/2019	Phanikumar	FW update to 2.04 build 50 to address backward
		Kancharla	compatibility bugs
2.19	05/04/2020	Phanikumar	FW update to 2.04 build 52 to address metadata
		Kancharla	corruption of shared users
2.20	06/09/2020	Phanikumar	FW update to 2.05 build 18.
		Kancharla	Adapter owner certificate is made configurable
			during partition identity
2.20.1	09/17/2020	Phanikumar	FW update to include 2.04 build 53 to address bug
		Kancharla	fixes related to input sanity.

Table of Contents

1	V	1odul	e Overview	7
2	Se	ecurit	y Level	10
3	N	lodes	of Operation	11
	3.1	FIPS	Approved Mode of Operation	11
	3.2	Non-	FIPS Mode of Operation	11
	3.3	Parti	itions	11
	3.	3.1	HSM Master Partition	
	_	3.2	HSM Partition	
4			ted Communication Channels	
5	Sı	uppor	ted Cryptographic Algorithms	14
	5.1		oved and Allowed Algorithms	
	5.2	Non-	Approved, Non-Allowed Algorithms	17
	5.3		Error Pattern for FIPS Failure	
	5.4		1.0/1.1/1.2 Cipher Suites	
6	Po	orts a	nd Interfaces	20
7	Id		ication and Authentication Policy	
	7.1	Assu	mption of Roles	21
		1.1	Manufacturer Role	
		1.2 1.3	Master Partition Roles	
		1.3 1.4	Pre-CO Role	
		1.5	Appliance User	
	7.2	Strer	ngth of Authentication	23
	7.3	Role	s, Services, and CSP Access	24
8	Ke	eys ar	nd Certificates	34
	8.1	Defir	nition of Critical Security Parameters (CSPs)	34
	8.2	Defir	nition of Public Keys	35
	8.3	Defir	nition of Session Keys	37
9	0	perat	ional Environment	38
1() Se	ecurit	y Rules	38
11	L P	hysica	al Security Policy	39
	11.1	Pi	hysical Security Mechanisms	39
12	2 N	litigat	tion of Other Attacks Policy	40
13		•	nces	
14			ions and Acronyms	
- 15			dix A: Supported ECC curves for Sig-Verify	
16		• •	dix B: Supported ECC curves for Key-Gen and Sig-Gen	
٠,		~~~''	and an ample to a control for the form of the organization of the control cont	

List of Tables

Table 1 – LED Description	8
Table 2 – Hardware Part Numbers	
Table 3 – Module Security Level Specification	10
Table 4 – FIPS Approved Algorithms Used in the Module	14
Table 5 – FIPS Allowed Algorithms Used in the Module	16
Table 6 – Non-Approved, Non-Allowed Algorithms Used in the Module	17
Table 7 – LED Flash Pattern for Errors	17
Table 8 – Marvell HSM Ports and Interfaces	20
Table 9 – Roles and Required Identification and Authentication	23
Table 10 – Strength of Authentication Mechanism	23
Table 11 – Roles, Services and CSPs	24
Table 12 – Private Keys and CSPs	34
Table 13 – Public Keys	35

List of Figures

Fig	JUPA 1	I – T	nη	View	of t	the C	`rvr	nt n	σra	nhic	iic Module	-
,	ξui C.		υþ	AICAN	OI I	uie c	,ı y þ	JLU	gı a	pilic	iic Modale	/

1 Module Overview

The Marvell (formally Cavium Inc.) NITROXIII CNN35XX-NFBE HSM Family (hereafter referred to as *the module or HSM*) is a high-performance purpose-built security solution for crypto acceleration. The module provides a FIPS 140-2 overall Level 3 security solution. The module is deployed in a PCIe slot to provide crypto and TLS 1.0/1.1/1.2 acceleration in a secure manner to the system host. It is typically deployed in a server or an appliance to provide crypto offload. The module's functions are accessed over the PCIe interface via an API defined by the module.

The module is a hardware/firmware multi-chip embedded cryptographic module. The module provides cryptographic primitives to accelerate approved and allowed algorithms for TLS 1.0/1.1/1.2 and SSH. This module itself does not perform SSH but accelerates the algorithms. The cryptographic functionality includes modular exponentiation, random number generation, and hash processing, along with protocol specific complex instructions to support TLS 1.0/1.1/1.2 security protocols using the embedded NITROXIII chip. The module implements password based single and dual factor authentication at FIPS 140-2 Level 3 security. The physical boundary of the module is the outer perimeter of the card itself.

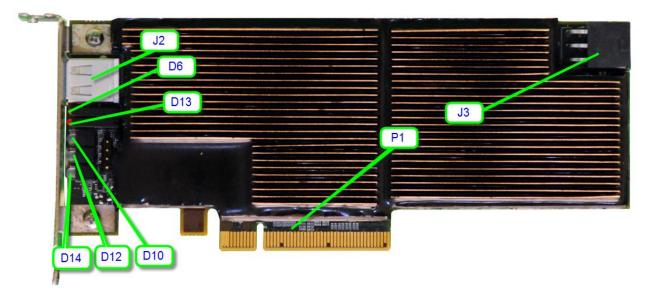


Figure 1 - Top View of the Cryptographic Module

Table 1 – LED Description

LED Location	LED Description
D6 – Red	Power Fail indication
D6 – Green	Power OK – All voltages rails are at nominal
D13 – Red	See Table 7
D13 – Green	See Table 7
D10 – Multicolor	See Table 7
D12 – Multicolor	See Table 7
D14 – Multicolor	See Table 7

The configuration of hardware and firmware for this validation is:

Table 2 - Hardware Part Numbers

Part Number	HW Version	LiquidSecurity Appliance	Cores Enabled	Key Store Size	Max Partitions
CNL3560P-NFBE-G	HW-1.0	Yes	64	100K	32
CNL3560-NFBE-G	HW-1.0	Yes	64	100K	32
CNL3530-NFBE-G	HW-1.0	Yes	32	25K	32
CNL3510-NFBE-G	HW-1.0	Yes	24	25K	24
CNL3510P-NFBE-G	HW-1.0	Yes	32	50K	32
CNL3560P-NFBE-2.0-G	HW-2.0	Yes	64	100K	32
CNL3560-NFBE-2.0-G	HW-2.0	Yes	64	100K	32
CNL3530-NFBE-2.0-G	HW-2.0	Yes	32	25K	32
CNL3510-NFBE-2.0-G	HW-2.0	Yes	24	25K	24
CNL3510P-NFBE-2.0-G	HW-2.0	Yes	32	50K	32
CNL3560PB-NFBE-2.0-G	HW-2.0	Yes	64	100K	32
CNL3560B-NFBE-2.0-G	HW-2.0	Yes	64	100K	32
CNL3530B-NFBE-2.0-G	HW-2.0	Yes	32	25K	32
CNL3510B-NFBE-2.0-G	HW-2.0	Yes	24	25K	24
CNL3510PB-NFBE-2.0-G	HW-2.0	Yes	32	50K	32
CNN3560P-NFBE-G	HW-1.0	No	64	100K	64
CNN3560-NFBE-G	HW-1.0	No	64	100K	32
CNN3530-NFBE-G	HW-1.0	No	32	25K	32
CNN3510-NFBE-G	HW-1.0	No	24	25K	24
CNN3510LP-NFBE-2.0-G	HW-2.0	No	24	25K	24
CNN3510LPB-NFBE-2.0-G	HW-2.0	No	24	25K	24

LP is low-frequency part, where N3 chip runs at 500MHz, otherwise it runs at 600MHz.

CNN35XX-NFBE-G Firmware

For HW-1.0 Parts:

CNN35XX-NFBE-FW-2.04 build 48, CNN35XX-NFBE-FW-2.04 build 49, CNN35XX-NFBE-FW-2.04 build 50, CNN35XX-NFBE-FW-2.04 build 52 and CNN35XX-NFBE-FW-2.04 build 53

CNN35XX-NFBE-FW-2.05 build 15, and CNN35XX-NFBE-FW-2.05 build 18.

For HW-2.0 Parts:

CNN35XX-NFBE-FW-2.04 build 48, CNN35XX-NFBE-FW-2.04 build 49, CNN35XX-NFBE-FW-2.04 build 50, CNN35XX-NFBE-FW-2.04 build 52 and CNN35XX-NFBE-FW-2.04 build 53

The module supports different performance options as listed above in the hardware identifier. The physical hardware and firmware are identical across all options. The underlying hardware has multiple identical cryptographic engines which are enabled or disabled using an option parameter set at manufacturing time. Also, the manufacturer can configure the HSM adapter to work only with Marvell's LiquidSecurity HSM appliances, these parts are identified with CNL prefix. CNN cards can work with non-Marvell appliances.

The major blocks of the module are the general purpose MIPS-based control processor, crypto processors, RAM memory, NOR and eMMC flash for persistent storage, USB interfaces, and PCle gen-2 x8 interfaces.

2 Security Level

The cryptographic module meets the overall requirements applicable to Level 3 security of FIPS 140-2.

Table 3 – Module Security Level Specification

Security Requirements Section	Level
Cryptographic Module Specification	3
Module Ports and Interfaces	3
Roles, Services and Authentication	3
Finite State Model	3
Physical Security	3
Operational Environment	N/A
Cryptographic Key Management	3
EMI/EMC	3
Power on Self-Tests	3
Design Assurance	3
Mitigation of Other Attacks	N/A
Overall	3

3 Modes of Operation

The module supports the following modes of operation:

- 1) Non-FIPS mode of operation
- 2) FIPS Approved Level 3 mode of operation

The module is initialized into one of the modes specified above during the module initialization period. The value of the parameter fipsState passed into the call specifies the mode. The following are the allowed values for fipsState parameters:

- 0 Non-FIPS mode
- 2 FIPS Approved mode with single factor authentication mechanism
- 3 FIPS Approved mode with certificate-based dual factor authentication mechanism

The indicator of Approved mode is obtained by using the Get Status service. The fipsState field of Get Status service indicates the mode.

3.1 FIPS Approved Mode of Operation

The module provides a FIPS Approved mode of operation, comprising all services described in Section 7.3 below. In this mode, the module allows only FIPS Approved or allowed algorithms. Request for any non-Approved/allowed algorithm is rejected.

3.2 Non-FIPS Mode of Operation

The Module supports a Non-FIPS mode implementing the non-FIPS Approved algorithms listed in Table 6.

3.3 Partitions

N3FIPS adapter is an sr-iov enabled intelligent PCIe adapter with 1 physical function and 128 virtual functions. In addition to the crypto offloads, this adapter can provide secure key storage with up to 64 partitions, including a master partition. Each partition will have its own users to manage the partition and own configuration policies and hence each partition can be treated as a virtual HSM. HSM always has one default partition called HSM Master partition and this contains configuration of the complete HSM and default configuration of any additional partitions that are created. Only one HSM partition can be assigned to one sr-iov virtual function of HSM adapter and vice-versa. Keys belonging to one partition are not accessible from another partition, this is achieved through a secure binding between partition and the PCIe virtual function.

3.3.1 HSM Master Partition

This is the default partition with only one user, called the Master Crypto Officer (MCO). This partition represents the operating state of the whole HSM adapter. I.e., initialization of HSM is nothing but initializing this partition with required configuration and MCO credentials. Zeroizing this partition will erase all HSM partitions in the adapter. The HSM has to be initialized and the MCO should already be logged in to create more partitions on the adapter. The MCO can backup and restore complete partition including user data, partition configuration and user keys. All the backup data is encrypted with Backup keys.

3.3.2 HSM Partition

Each partition will have a different set of users to manage it and a dedicated key storage and crypto resources associated. A partition will have a default configuration supplied by the master partition and can be changed (within limits) during the partition initialization. When a partition is created by the MCO, it will be in a zeroized state and has to be initialized to do any keystore management or crypto function offloads. Partition initialization will create the Partition Crypto Officer (PCO). The PCO can later create up to 1024 users (PCO or PCU) on demand. Each user will have a unique username to identify themselves. The User has to login to the partition/vHSM to issue any authorized commands. Users are authenticated using passwords submitted during the user creation.

4 Encrypted Communication Channels

End to End encryption feature in the N3FIPS FW allows an application to initiate an SSL connection with the firmware to ensure the confidentiality of the data communicated over PCIe path.

The SSL connection handshake between the client and the server is based on **TLS 1.2** with the cipher suite as **AES128-SHA256-GCM**. FW will act as server and host application will act as client. The **server private key** will be the partition private key PAK which is generated for each pHSM when the pHSM/partition is created. The **server certificate** used for the SSL connection is the partition certificate PAC. Complete chain will be validated by the cav client before establishing the SSL connection.

End to End encryption feature is enabled using the initialization configuration parameters. Once this feature is enabled, all commands, except the initialize and open session, are encrypted.

5 Supported Cryptographic Algorithms

This section provides the list of supported cryptographic algorithms segregated based on the operating mode.

5.1 Approved and Allowed Algorithms

The cryptographic module supports the following FIPS Approved algorithms.

Table 4 – FIPS Approved Algorithms Used in the Module

FIPS Approved Algorithm	Usage	Certificate
AES:	Data encryption and decryption	2033
- ECB mode: Encrypt/Decrypt; 128, 192 and 256-bit	,, ,,	
- CTR mode: 128, 192 and 256-bit		
AES:	Data encryption and decryption	2034
- ECB mode: Encrypt/Decrypt; 128, 192 and 256-bit		
- CBC mode: Encrypt/Decrypt; 128, 192 and 256-bit		
AES:	Data encryption, decryption	2035
- GCM: Encrypt/Decrypt; 128, 192 and 256-bit	and key wrap	
 128-bit random IV; regular data encryption 		
 96-bit random IV; TLS record encryption 		
- IG A.5 Notes:		
- TLS 1.2 or other applications can offload GCM operations.		
 For TLS-1.2 protocol, IV constructed as described in RFC 5288. 		
 IV is generated internally to the cryptographic module. 		
 IV is not generated internally to the GCM algorithm 		
boundary.		
- SP 800-38D §8.2.2 is used for GCM IV construction.		
 IVs are generated randomly and IG A.5 Requirement #2 applies. 		
 IV's free field is a 4-byte counter. 		
 IV's random field is a 96-bit random number. 		
IV's random field is incremented by 1.		
 Internal Approved RNG: SP 800-90A DRBG, AES_CTR 256- bit. 		
 Internal NDRNG used to seed the Approved RNG: Octeon HW random number generator 		
When power is lost, all GCM state information is		
destroyed. The only way to resume a GCM session is to		
start with a fresh GCM state to guarantee a fresh unique		
IV.		
AES:	DRBG (Cert. #680) and Keywrap	3205
ECB mode: Encrypt/Decrypt; 128, 192 and 256-bitCTR mode: 256-bit	(Cert. # 3206)	
AES:	Key backup/restore	3206
- SP 800-38F AES Key Wrap, AES 256-bit		
AES:	Key backup/restore	4104
- SP 800-38F AES Key Wrap, AES 192-bit, 128-bit		

FIPS Approved Algorithm	Usage	Certificate
 CKG: IG D.12 SP 800-133 Section 6.1 Asymmetric signature key generation using unmodified DRBG output SP 800-133 Section 6.2 Asymmetric key establishment key generation using unmodified DRBG output SP 800-133 Section 7.1 Direct symmetric key generation using unmodified DRBG output SP 800-133 Section 7.3 Derivation of symmetric keys from a key agreement shared secret. SP 800-133 Section 7.4 Derivation of symmetric keys from a pre-shared key 	Key generation	Vendor Affirmed
CVL: - TLS-KDF (v1.0/1.1/1.2)	TLS handshake	167
CVL: - SP 800-56A ECC CDH: P-224 and P-256 with SHA-256, P-384 and P-521 with SHA-512	ECDH compute and SSL suite B key exchange	563
DRBG: - SP 800-90A DRBG: AES-CTR 256-bit	Key generation	680
DSA: - PQG Gen: 2048 and 3072-bit (SHA-256) - PQG Ver: 1024-bit (SHA-1); 2048 and 3072-bit (SHA-256) - Key Gen: 2048 and 3072-bit - Sig Gen: 2048-bit (SHA-224, -256, -384, -512) - SigVer: 1024, 2048 and 3072-bit (SHA-1, 224, -256, -384, -512)	Key generation, Sign and Verify	916
ECDSA: PKG: P-224, P-256, P-384, P-521, K-233, K-283, K-409, K-571, B-233, B-283, B-409, and B-571 PKV: All P, K and B curves Sig Gen: P-224, P-256, P-384, P-521, K-233, K-283, K-409, K-571, B-233, B-283, B-409, and B-571 (SHA-224, -256, -384, -512) SigVer: All P, K and B curves (SHA-1, 224, -256, -384, -512)	Key generation, Sign and Verify	589
HMAC: - HMAC-SHA-1, 224, 256, 384, 512	MAC generation	1233
HMAC: - HMAC-SHA-1, 224, 256, 384, 512	MAC generation and KAS	2019
KAS: - SP 800-56A ECC KAS: P-521, SHA-512, and HMAC	Shared key generation	53
SP 800-56B RSA/IFP based KAS using 2048-bit key size	Key agreement	N/A: Vendor affirmed
KBKDF: - SP 800-108 HMAC-SHA-256, 384, 512 KDF	KBK generation and Key derivation	65
KTS (AES GCM); Key establishment methodology provides between 128 and 256 bits of encryption strength	Key Transport	2035
KTS (SP 800-38F AES)	Key Transport	3206

FIPS Approved Algorithm	Usage	Certificate
KTS (SP 800-38F AES 128, 192); Key Establishment methodology provides 128 or 192 bits of encryption strength	Key Transport	4104
KTS (SP 800-38F Triple-DES); Key establishment methodology provides 112 bits of encryption strength	Key Transport	2242
RSA: - KeyGen: 2048, 3072, 4096*-bit - PKCS #1 1.5 SigGen: 2048, 3072-bit (SHA-224, -256, -384, -512) - PKCS #1 1.5 SigVer: 1024, 2048 and 3072-bit (SHA-1, 224, -256, -384, -512)	Key generation, Sign and Verify	1634
RSA: - FIPS 186-2 - PKCS #1 1.5 SigGen: 4096-bit (SHA-224, -256, -384, -512) - PSS SigGen 4096-bit (SHA-224, -256, -384, -512) - FIPS 186-4 - PSS SigGen: 2048, 3072-bit (SHA-1, -224, -256, -384, -512) - PSS SigVer: 1024, 2048, 3072-bit (SHA-1, -224, -256, -384, -512)	Sign and Verify	2218
SHA: - SHA-1, 224, 256, 384 and 512	Data hashing	1780
SHA: - SHA-1, 224, 256, 384 and 512	Signature generation, verification, HMAC. SHA-1 used for verify only.	2652
Triple-DES: - TECB mode; 3-key - TCBC mode; 3-key	Data encryption and decryption	1311
Triple-DES: - SP800-38F Triple-DES Key Wrap - ECB mode: Encrypt/Decrypt *Vendor Affirmed	Key Wrap	2242

^{*}Vendor Affirmed

The cryptographic module supports the following non-FIPS Approved algorithms which are allowed for use in FIPS mode.

Table 5 – FIPS Allowed Algorithms Used in the Module

Algorithm	Usage
[IG A.2] EC Curve Secp256K1 (128-bit strength)	ECDSA Key generation, Sign/Verify
[IG D.8 Scenario 3] EC Diffie-Hellman (CVL #167, CVL #563; key establishment methodology provides 128 bits of encryption strength; non-compliant with SP800-56A)	Key agreement
[SP 800-135] MD5	Hashing within TLS
[IG 7.15] Hardware RNG (NDRNG)	Seed, seed key generation
[IG D.9] RSA PKCS#1 of modulus size 2048, 3072 and 4096 bits (key wrapping; key establishment methodology provides 112 or 128 bits of encryption strength)	CSP Encrypt/Decrypt

The support of TLS 1.0/1.1/1.2 protocol by the module is restricted to the TLS Key Derivation Function and the crypto operation. This functionality of the module is used by the user of the module as part of TLS protocol negotiation. The TLS protocol has not been reviewed or tested by the CAVP or CMVP.

5.2 Non-Approved, Non-Allowed Algorithms

The cryptographic module supports the following non-Approved algorithms available only in non-FIPS mode.

Table 6 - Non-Approved, Non-Allowed Algorithms Used in the Module

Algorithm	Usage	Keys/CSPs	
PBE	Key generation	Password	
RC4	Encryption/Decryption	RC4 key of 128 bits	

5.3 LED Error Pattern for FIPS Failure

On successful completion of the FIPS tests, the LED remains in the "ON" state. Blinking indicates failures on the HSM. If the LED remains in the permanent glow, the card's state is fine. All blinks are 200ms ON and 200ms OFF. Blink delay time gap is 1000ms.

Table 7 - LED Flash Pattern for Errors

FIPS Test	LED Patter	LED Pattern					
	LED No.	Color	Red	Green	Blue	Blinks	
N3 AES-CBC Encrypt/Decrypt	D12	Red	Υ	N	N	1	
N3 AES-ECB Encrypt/Decrypt	D12	Blue	N	N	Υ	1	
N3 AES-GCM Encrypt/Decrypt	D12	Blue	N	N	Υ	6	
N3 Triple-DES-CBC Encrypt/Decrypt	D12	Red	Υ	N	N	2	
N3 SHA	D12	Red	Υ	N	N	3	
N3 HMAC	D12	Blue	N	N	Υ	2	
N3 KDF	D12	Blue	N	N	Υ	7	
Octeon AES ECB Encrypt/Decrypt	D12	Green	N	Υ	N	9	
Octeon DRBG	D12	Green	N	Υ	N	4	
Octeon RSA Sign/Verify	D12	Red	Υ	N	N	4	
Octeon RSA Encrypt/Decrypt	D12	Red	Υ	N	N	6	
Octeon DSA Sign/Verify	D12	Red	Υ	N	N	7	
Octeon ECDSA Sign/Verify	D12	Green	N	Υ	N	7	
Octeon ECDSA PKV	D12	Green	N	Υ	N	6	
Octeon SHA	D12	Green	N	Υ	N	2	
Octeon HMAC	D12	Green	N	Υ	N	3	
Octeon KAS	D12	Green	N	Υ	N	8	
Octeon AES Key Wrap	D12	Blue	N	N	Υ	10	

FIPS Test	LED Patte	rn	LED Pattern					
	LED No.	Color	Red	Green	Blue	Blinks		
RSA PSS Sign/Verify	D12	Green	N	Υ	N	5		
ECDSA pair wise consistency test	D12	Blue	N	N	Υ	4		
RSA pair wise consistency test	D12	Blue	N	N	Υ	5		
DSA pair wise consistency test	D12	Green	N	Υ	N	1		
ECDH Test	D12	Red	Υ	N	N	10		
Octeon KDF	D12	Red	Υ	N	N	11		
Triple-DES-ECB Encrypt/Decrypt	D12	Red	Υ	N	N	5		
Triple-DES-ECB Key wrap/unwrap	D12	Red	Υ	N	N	8		
Firmware Power-on Tests								
Nitrox device file creation	D14	Red	Υ	N	N	1		
Nitrox driver load fails	D14	Red	Υ	N	N	2		
Nitrox micro code load fails	D14	Red	Υ	N	N	3		
Nitrox pot test failures	D14	Red	Υ	N	N	4		
Database creation fails	D14	Red	Υ	N	N	5		
Mgmt daemon has not started successfully	D14	Red	Υ	N	N	6		
HW RNG for firmware	D12	Blue	N	N	Υ	3		
Other Firmware States								
HSM Boot stage 1	D10	Red	Υ	N	N	No blink		
HSM Boot stage 2	D10	Red	Υ	N	N	Blink (definite)		
HSM Boot stage 3(SE-APP initialized Linux handshake not done)	D10	Violet	Y	N	Y	No blink		
HSM Linux handshake done, host driver handshake not done	D10	Violet	Υ	N	Y	Infinite		
HSM PF driver handshake complete	D10	Green	N	Y	N	No blink		
HSM admin driver handshake done	D10	Blue	N	N	Υ	No blink		

5.4 TLS 1.0/1.1/1.2 Cipher Suites

The module supports the following cipher suites using FIPS Approved and allowed algorithms and key sizes:

- TLS_RSA_AES256-GCM-SHA384
- TLS_RSA_AES128-GCM-SHA256
- TLS_RSA_AES256-SHA256
- TLS_RSA_AES256-SHA

- TLS RSA DES-CBC3-SHA
- TLS_RSA_AES128-SHA256
- TLS RSA AES128-SHA
- TLS_ECDH_RSA_AES_128_CBC_SHA256
- TLS ECDH RSA AES 256 CBC SHA384
- TLS ECDH RSA AES 128 GCM SHA256
- TLS_ECDH_RSA_ AES_256_GCM_SHA384
- TLS ECDH ECDSA AES 128 CBC SHA256
- TLS_ECDH_ECDSA_ AES_256_CBC_SHA384
- TLS_ECDH_ECDSA_ AES_128_GCM_SHA256
- TLS_ECDH_ECDSA_ AES_256_GCM_SHA384
- TLS_ECDHE_RSA_ AES_128_CBC_SHA256
- TLS_ECDHE_RSA_AES_256_CBC_SHA384
- TLS_ECDHE_RSA_ AES_128_GCM_SHA256
- TLS_ECDHE_RSA_ AES_256_GCM_SHA384
- TLS_ECDHE_ECDSA_ AES_128_CBC_SHA256
- TLS_ECDHE_ECDSA_ AES_256_CBC_SHA384
- TLS_ECDHE_ECDSA_ AES_128_GCM_SHA256
- TLS_ECDHE_ECDSA_ AES_256_GCM_SHA384

For cipher suites using GCM, the IV is generated per RFC 5288. The module supports GCM cipher suites compatible with SP 800-52.

6 Ports and Interfaces

The module ports and interfaces are described in the below table.

Table 8 - Marvell HSM Ports and Interfaces

Physical Ports/Interfaces	Pins Used	FIPS 140-2 Designation	Name and Description
USB Interface (J2)	USB Interface USBO_DP, USBO_DM	Power No functionality in FIPS mode	USB Interface Not used in FIPS mode
Serial Interface (J3)	3 Pin serial interface - GND, Tx, Rx	N/A No functionality in FIPS mode	Disabled at the hardware level during the firmware load process.
PCIe Interface (P1)	PCIE x8 Interface Lane 0 Transmit Side B (14, 15) Receive Side A (16, 17) Lane 1 Transmit Side B (19, 20) Receive Side A (21, 22) Lane 2 Transmit Side B (23, 24) Receive Side A (25, 26) Lane 3 Transmit Side B (27, 28) Receive Side A (29, 30) Lane 4 Transmit Side B (33, 34) Receive Side A (35, 36) Lane 5 Transmit Side B (37, 38) Receive Side A (39, 40) Lane 6 Transmit Side B (41, 42) Receive Side A (43, 44) Lane 7 Transmit Side B (45, 46) Receive Side A (47, 48)	Data Input Control Input Data Output Status Output Power	PCIe Interface - Primary interface to communicate with the module - Provides APIs for the software on the host to communicate with the module
LED	LED interface (7 LEDs, 13 pins)	Status output	Visual status indicator
Tamper PIN	Tamper pin GPIO	Control Input	Tamper pin is used to zeroize the card by zeroizing the master key stored in EEPROM
Power Connector	6 PIN power connector	Power In	External power connector.

7 Identification and Authentication Policy

7.1 Assumption of Roles

The Cryptographic Hardware Security Module enforces identity-based authentication. A role is explicitly selected at authentication; the MCO role is associated with the Master Partition and the PCO and PCU roles are associated with user partitions. The module allows one identity per role.

7.1.1 Manufacturer Role

During the manufacturing stage, each HSM goes through the following process:

- An RSA key pair called the HSM FIPS Master Authentication Key (FMAK) is generated on HSM. CSR
 is requested out of HSM and signed by the Manufacturer Authentication Root Certificate (MARC).
 The generated certificate is called the HSM FIPS Master Authentication Certificate (FMAC).
- A 256-bit MFKBK encrypted with the FMAK public key is loaded into the HSM.
- Program Performance settings and capabilities Appliance Compatibility mode, run random operations, Encrypted channels
- Program Serial Number and Max Operating Temperature

The same above steps are followed by the manufacturer once the HSM is moved to manufacturer reset after manufacturer zeroize.

7.1.2 Master Partition Roles

Master partition supports only Cryptographic Officer role, referred to as the Master Crypto Officer (MCO). The Username and password are encrypted with an AES 256-bit key.

7.1.3 Non-Master Partition Roles

Each Non-Master Partition supports three (3) distinct operator roles, Appliance User (AU), Partition Crypto User (PCU) and Partition Crypto Officer (PCO). The module enforces the separation of roles using identity-based authentication. Re-authentication is required to change roles.

Concurrent operators are allowed; however, only one operator is allowed per login session.

The Username is used as the identification for identity-based authentication. The username and password encrypted with an AES 256-bit key is passed during the Login service.

7.1.4 Pre-CO Role

Users/roles on a partition are created during the partition initialization and later. Create user service requires a CO role to authorization. Pre-CO is actually a CO optionally created during the partition initialization with limited functionality to support some operational or deployment scenarios where MCO want to control what a PCO can do on a partition. MCO can create a partition, initialize it by creating Pre-CO role and configure before passing it to the probable PCO. We force the probable PCO to change password (remember MCO knows the of Pre-CO password) role to become a PCO.

PCO capabilities in Table 11 are marked with (*) mark to indicate Pre-CO can run these services.

7.1.5 Appliance User

The Appliance User is authenticated using a username and password which is encrypted with an AES 256-bit key on entry. This is special user meant to clone or maintain the partition.

7.2 Strength of Authentication

Table 9 – Roles and Required Identification and Authentication

Role	Description	Authentication Type	Authentication Data
Manufacturer	This role sets the identity, serial number, performance settings and max operating temperature	Manufacturer License certificate based authentication	RSA 2048-bit signature on the provided data.
МСО	This role has access to administrative services offered by the module or HSM	Identity-based operator authentication	Case In-Sensitive Username and 7 to 32-character encrypted password and RSA 2048 signature**
Pre-CO	This role is an optional role with limited functionality, eventually transition into PCO.	Identity-based operator authentication	Case In-Sensitive Username and 7 to 32-character encrypted password
PCO	This role has access to administrative services of the partition	Identity-based operator authentication	Case In-Sensitive Username and 7 to 32-character encrypted password and RSA 2048 signature**
PCU	This role has access to all crypto services offered by the partition	Identity-based operator authentication	Case In-Sensitive Username and 7 to 32-character encrypted password and RSA 2048 signature**
Appliance User	This role has access to partition audit logs and Appliance secure channel key	Identity-based operator authentication	Case In-Sensitive Username and 7 to 32-character encrypted password

Table 10 – Strength of Authentication Mechanism

Authentication Mechanism	Strength of Mechanism
Authentication using password based scheme**	This mode provides a false acceptance rate of 1/78,364,164,096 less than 1/1,000,000), determined by the password. Password is minimum 7 characters, alpha-numeric so it is (26+10)^7
	To exceed 1 in 100,000 probability of a successful random attempt during a 1-minute period, 7350919 (122515 per second) attempts would have to be executed.
	The module limits the number of Login tries to a user configured value "login_fail_count" during module initialization. This configuration value cannot exceed 20.
	If the user exceeds the configured value for maximum consecutive failed login attempts then the corresponding user is blocked from login service. A PCO can reset passwords and unblock PCU of his own partition.
Authentication using RSA Signatures	Authentication is performed using SHA-256 based RSA 2048-bit PKCS#1-v1.5 signatures (provides 112 bits of strength). Corresponding public key is part of FW image. The probability that a random attempt will succeed, or a false acceptance will occur, is approximately 1/2^112. The fastest the module can process signature verifications is 4,000 per minute. Based on this maximum

rate, the probability that a random attempt will succeed in a one minute
period is approximately 4,000/2^112.

^{**}Note: The Module supports dual factor authentication where the first factor is a user name and password as described above and the second factor is a digital signature.

7.3 Roles, Services, and CSP Access

G = Generate: The module generates the CSP.

R = Read: The module reads the CSP out of the module.

 $\underline{\mathbf{W}}$ = Write: The module writes the CSP. The write access is typically performed after a CSP is imported into the module, or the module generates a CSP, or the module overwrites an existing CSP.

Z = Zeroize: The module zeroizes the CSP.

E = Execute: The module executes or uses the CSP.

Table 11 - Roles, Services and CSPs

MCO	РСО	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
Х			х		Х	HSM Zeroize	Zeroize: All non-Mfr specific keys/data	CN_ZEROIZE	G: N/A E: N/A R: N/A W: N/A Z: Partial
	X	X		х	х	Partition Zeroize	Zeroize: All non Mfr specific keys/data of partition	CN_ZEROIZE	G: N/A E: N/A R: N/A W: N/A Z: Partial
х						Vendor/ Manufacture Zeroize HSM	Zeroize: all data	CN_VENDOR_ ZEROIZE	G: N/A E: N/A R: N/A W: N/A Z: All
х	Х	X	х	X	X	Session Management	Management services for open, status of sessions.	CN_APP_INITIALIZE CN_APP_FINALIZE CN_OPEN_SESSION CN_CLOSE_SESSION CN_GET_SESSION_ NFO	G: N/A E: N/A R: N/A W: N/A Z: Session Keys Stored in RAM

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
X	X	X	X	Х	Х	Session Management – Close	Management services for closing all sessions.	CN_CLOSE_ALL_ SESSIONS	G: N/A E: N/A R: N/A W: N/A Z: Session Keys Stored in RAM
х	X					Partition Application Session Close (All)	Close sessions of all Applications tied to a Partition	CN_CLOSE_ PARTITION_ SESSIONS	G: N/A E: N/A R: N/A W: N/A Z: Session Keys Stored in RAM
х	x	х	х	х	x	Basic HSM Info	Obtain basic information of the HSM.	CN_TOKEN_INFO CN_PARTITION_INFO CN_GET_HSM_LABEL CN_ALL_PARTITION_ INFO	G: N/A E: N/A R: N/A W: N/A Z: N/A
х	x	х	х	х	х	Read Firmware Version String	Obtain firmware version	CN_GET_VERSION	G: N/A E: N/A R: N/A W: N/A Z: N/A
х	x	х	х	х	х	Read or delete coredump file	Read-out or delete coredump if it exist	CN_GET_CORE_DUM P CN_DELETE_CORE_D UMP	G: N/A E: N/A R: N/A W: N/A Z: N/A
					Х	Enables encrypted communicatio n channel	Create E2E session	CN_ENCRYPT_SESSIO N CN_AUTHORIZE_SES SION	G: E2E TLS Session Symmetric Key Set, E2E TLS Session HMAC Key Set E: PAC R: N/A W: N/A Z: N/A
х	х	х	х	Х	х	Login to a Session	Allows login to a session. Public key is used to verify user signatures, optionally in 2-factor authentication.	CN_LOGIN	G: N/A E: PswdEncKey R: Password and Two-Factor Authentication Public Key W: N/A Z: N/A

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
X	х	х		X		Logout of a Session	Allows logout of a session	CN_LOGOUT	G: N/A E: N/A R: N/A W: N/A Z: N/A
x	Х*	X		X		Change User Password	Requires user to be logged in. Updates Passwords and Public key for 2-factor authentication	CN_CHANGE_PSWD	G: N/A E: PswdEncKey R: N/A W: new password, new public key Z: Old password
X			X			Manufacturer Settings	Manufacturer Controlled Settings run by manufacturer for the first time and MCO can do it later.	CN_MASTER_CONFI G CN_CERT_AUTH_ GET_CERT_REQ CN_CERT_AUTH_ STORE_CERT CN_STORE_VENDOR _PRE_SHARED_ KEY	G: FMAK, MFDEK E: Manufacturer License Validation Key R: CSR of FMAK W: MARC, FMAC, MFKBK Z: N/A
х						Initialize HSM	Commands and services to initialize the module.	CN_INIT_TOKEN CN_GEN_PSWD_ ENC_KEY CN_CREATE_CO CN_INIT_DONE CN_CERT_AUTH_ STORE_CERT CN_CERT_AUTH_ GET_CERT_REQ CN_CERT_AUTH_ STORE_CERT CN_CERT_AUTH_ STORE_CERT CN_STORE_USER_ PRE_SHARED_ KEY	G: PswdEncKey, E: PswdEncKey, MFDEK R: CSR for FMAK W: Host PswdEncKey Public Key, AOAC, Password, Two-Factor Authentication Public key, AOTAC Z: N/A
				X		Secure Boot	Commands to identify the hosts are of Cavium	CN_CERT_AUTH_ GET_CERT CN_CERT_AUTH_ RECV_PEER_CER T CN_CERT_AUTH_ SECURE_BOOT	G: N/A E: MARC to validate HOST_ID cert, HOST_ID cert to validate signature on challenge R: FMAC W: N/A Z: N/A

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
x						Firmware Update	Updates adapter with Cavium signed firmware images. Adapter has to be rebooted to use the new firmware. Note: new firmware must be FIPS validated to maintain compliance.	CN_FW_UPDATE_ BEGIN CN_FW_UPDATE CN_FW_UPDATE_ END	G: N/A E: Manufacturer Firmware Validation Key R: N/A W: Manufacturer Firmware Validation Key, Manufacturer License Validation Key Z: Optionally Zeroize the HSM keys.
х						Other MCO Operations	Misc. MCO Operations	CN_SLAVE_CONFIG CN_INVOKE_FIPS	G: N/A E: N/A R: N/A W: N/A Z: N/A
х						Partition Management	Commands and services to manage partitions	CN_CREATE_ PARTITION CN_DELETE_ PARTITION CN_RESIZE_ PARTITION CN_GET_PARTITION_ COUNT CN_ALL_PARTITION_ INFO	G: PAK key pair, FMEK E: FMAK, MFDEK R: N/A W: PAC Z: All partition keys
х						MCO Backup and Restore	Allows MCO to take back up using KBK derived from preloaded MFKBK, OKBK. MCO uses find key in to get the key handles in a partition	CN_BACKUP_BEGIN CN_BACKUP_CONFIG CN_BACKUP_USERS CN_BACKUP_KEY CN_BACKUP_END CN_RESTORE_BEGIN CN_RESTORE_CONFI G CN_RESTORE_USERS CN_RESTORE_KEY CN_RESTORE_END	G: KBK, E: MFKBK, OKBK, Optionally POKBK, KBK, Backup Session Key R: POTAC, All keys NIST AES wrapped with KBK W: User passwords and Two- Factor Authentication Public Keys, All keys NIST AES wrapped with KBK, new POTAC verify the owner ship Z: N/A

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
	х					PCO Backup and Restore	PCO uses find key in to get the key handles in a partition	CN_BACKUP_BEGIN CN_CREATE_OBJECT CN_WRAP_KBK (Modes:	G: KBK Wrapping RSA key pair, POKBK, KBK E: KLK/KEK or KBK Wrap RSA public key or CertAuthTokenKey, Partition KBK, KBK, MFKBK, OKBK, POKBK, Backup Session Key R: wrapped Partition KBK, User passwords and Two-Factor Authentication Public Keys, All user keys, W: KBK wrap public key, All keys NIST AES wrapped with KBK, User passwords and Two-Factor Authentication Public Keys, All user keys, Z: N/A
X						MCO Partition Data Management	Commands to manage Unclassified data storage mainly used to maintain network IP addresses	CN_PARTN_ STORAGE_ UPDATE CN_PARTN_ STORAGE_GET CN_PARTN_ STORAGE_ DELETE	G: N/A E: N/A R: N/A W: N/A Z: N/A
	X*					Partition Initialization	Commands to initialize the partition and claim ownership of the partition, reset resources	CN_INIT_TOKEN CN_GEN_PSWD_ ENC_KEY CN_CREATE_CO CN_INIT_DONE CN_CERT_AUTH_ GET_CERT_REQ CN_CERT_AUTH_ STORE_CERT CN_STORE_USER_ PRE_SHARED_ KEY CN_ACC_DEV_RESET	G: PswdEncKey, Partition's Masking Key E: PswdEncKey, FMAK R: CSR for PAK W: Host PswdEncKey Public Key, Password, Two-Factor Authentication Public key, POAC, POTAC, POKBK Z: N/A

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
	х					PCO UserManagem ent	Commands to manage users in the partition	CN_CREATE_USER CN_DELETE_USER CN_LIST_USERS CN_GET_LOGIN_ FAILURE_CNT CN_CREATE_PRE_OF FICER	G: N/A E: PswdEncKey to decrypt and store, PMEK to encrypt the password and store it in database R: N/A W: password and new Public key Z: all session keys
х	x					SecureAuth based on Certificates	Commands used for mutual authentication and key agreement between two partitions/entities of same Partition owner on Marvell HSM.	CN_CERT_AUTH_ GET_CERT CN_CERT_AUTH_ GET_SOURCE_ RANDOM CN_CERT_AUTH_ VALIDATE_PEER CERTS CN_CERT_AUTH_ GET_CERT CN_CERT_AUTH_ VALIDATE_PEER CERTS CN_CERT_AUTH_ VALIDATE_PEER CERTS CN_CERT_AUTH_ SOURCE_KEY_ EXCHANGE	G: N/A E: POTAC to verify peer POAC, MARC to verify peer PAC and FMAC, peer PAC to verify peer signature, local PAK to sign responder's challenge, local PAK to sign initiator's challenge R: FMAC, PAC, POAC, W: Peers FMAC, PAC, POAC, Z: N/A

МСО	РСО	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
x	х					Cloning Protocol	Cloning: Clone Masking of a Partition to a different Partition of the same owner.	CN_CLONE_SOURCE_ INIT CN_CLONE_SOURCE_ STAGE1 CN_CLONE_TARGET_ INIT CN_CLONE_TARGET_ STAGE1	G: Partition's Masking Key, KAS key pair, Z and KAS keying material, Partition's Cloning Private Key E: KAS keying material for masking key encryption and mac tag generation and peer mac tag verification, KAS keying material for presumed data encryption and mac tag generation, KAS keying material to decrypt the masking key, validate MAC tag. R: Partition Cloning Public Key, Partition's Masking Key Z: Z and KAS keying material
	X*					Key Transportation	A SP 800-56 A/B protocol to generate a shared KLK on host and Partition.	CN_GEN_KEY_ENC_ KEY	G: Partition KLK RSA/ECC key pair, KLK E: N/A R: KLK Initiator Public Key, KLK Responder Public Key W: Host RSA/ECC KLK Public Key, KLK Initiator Public Key, KLK Responder Public Key, KLK Responder Public Key

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
	X	x		x		PCU Key Management	Key can be shared with multiple users to use it for crypto operations. Tombstone feature is added to support key deletions in cluster modes. Note: clusters are fully maintained out of HSM and this is just to enable the feature.	CN_EXTRACT_ MASKED_OBJEC T CN_INSERT_ MASKED_OBJEC T CN_DESTROY_OBJEC T CN_GET_ATTRIBUTE VALUE CN_GET_ATTRIBUTE SIZE CN_GET_ALL_ATTRIB UTES_SIZE CN_GET_ALL_ATTRIB UTES_VALUE CN_MODIFY_OBJECTS CN_FIND_OBJECTS FROM_INDEX CN_GENERATE_KEY CN_GENERATE_KEY CN_GENERATE_KEY CN_GENERATE_KEY CN_GENERATE_PBE_ KEY CN_SHARE_KEY CN_SHARE_KEY CN_GET_OBJECT_ INFO CN_TOMBSTONE_OB JECT CN_DELETE_TOMBST ONED_OBJECT CN_WRAP_KEY CN_DERIVE_KEY CN_DERIVE_KEY CN_DERIVE_KEY CN_DERIVE_KEY	G: General Purpose User CSPs, General Purpose User Public Keys E: Masking Key, KLK or user provided wrapping Key, PEK specified user key, all user keys, R: General Purpose User CSPs, General Purpose User Public Keys W: Imported keys Z: General Purpose User CSPs, General Purpose User Public
X	х	х		X		Find Key handles	Users can find key handles based on search criteria like key type or label. MCO/PCO use it as part of backup service. Hash of key handles in order to check if clusters are in sync.	CN_FIND_OBJECTS CN_FIND_OBJECTS_ FROM_INDEX CN_ADMIN_GET_PA RTN_KEYHANDL ES_HASH	G: N/A E: N/A R: All user keys W: N/A Z: N/A

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
				X		PCU Key Management – Special	Unwrap only RSA Key	CN_UNWRAP_KEY CN_FIND_OBJECT CN_DELETE_OBJECT	G: N/A E: KLK R: Asymmetric Private Key (RSA only) W: Asymmetric Private Key (RSA only) Z: Asymmetric Private Key (RSA only)
		Х		х		PCU Crypto Offload	CN_ME_PKCS and CN_ME_PKCS_LARGE are RSA 2K and 3K operations. Appliance user is allowed to use the imported RSA key.	CN_SIGN CN_VERIFY CN_ECC_DH CN_NIST_AES_WRAP CN_ALLOC_SSL_CTX CN_FREE_SSL_CTX CN_GEN_PMK CN_FIPS_RAND CN_ME_PKCS_LARGE CN_ME_PKCS CN_FECC CN_HASH CN_HMAC CN_ENCRYPT_DECRY PT	G: N/A E: specified user key R: N/A W: N/A Z: N/A
	х			х		Audit Logs – PCO / Appliance		CN_PARTN_GET_ AUDIT_DETAILS CN_PARTN_GET_ AUDIT_LOGS CN_PARTN_GET_ AUDIT_SIGN CN_PARTN_GET_AU DIT_PER_LOG_SI GN CN_PARTN_GET_AU DIT_LOG_DONE	G: N/A E: PAK, FMAK R: N/A W: N/A Z: N/A
х						Audit Logs – MCO		CN_ADMIN_GET_ PARTN_AUDIT_ DETAILS CN_ADMIN_GET_ PARTN_AUDIT_ LOGS CN_ADMIN_GET_ PARTN_AUDIT_ SIGN	G: N/A E: FMAK R: N/A W: N/A Z: N/A

МСО	PCO	PCU	Manufacturer	Appliance User	Unauthenticated	Service	Description	Commands	Cryptographic Keys/CSPs
		X				SSL Protocol Packet Processing	These API can understand the TLS protocol semantics and optimized to do multiple sequential crypto operations on the given input data. For example: Encrypt/decrypt record will do HMAC comparison in addition to the symmetric crypto operation.	MAJOR_OP_RSASER VER_LARGE MAJOR_OP_RSASER VER MAJOR_OP_HANDSH AKE MAJOR_OP_OTHER MAJOR_OP_FINISHE D MAJOR_OP_RESUME MAJOR_OP_ENCRYP T_DECRYPT_REC ORD MAJOR_OP_ECDH	G: TLS Session Symmetric Key Set and TLS Session HMAC key part of SSL Context; TLS pre-master secret; TLS Master Secret E: TLS Session Symmetric Key Set and TLS Session HMAC key part of SSL Context; TLS pre-master secret; TLS Master Secret; TLS authentication keys R: N/A W: N/A Z: N/A
	х	X				MofN authentication	To execute a service or use key 'm' users of 'n' allowed users should approve.	CN_GET_TOKEN CN_APPROVE_TOKE N CN_LIST_TOKENS	G: N/A E: NA R: RSA public key for signature verification on token W: N/A Z: N/A

PCO capabilities in Table 11 are marked with (*) mark to indicate Pre-CO can run these services.

8 Keys and Certificates

8.1 Definition of Critical Security Parameters (CSPs)

The Manufacturer FIPS Data Encryption Key (MFDEK) and HSM Master Partition Master Encryption Key are stored in plaintext form in the EEPROM. The Partition Master Encryption Key (PMEK) is stored encrypted under the HSM Master Partition Master Encryption Key. All other keys and CSPs stored in the persistent memory are encrypted by the MFDEK, HSM Master Partition Master Encryption Key, or PMEK. All general-purpose user CSPs are generated/created by PCU and these CSPs can be shared between multiple PCUs.

Note: The module generates cryptographic keys whose strengths are modified by available entropy. The estimated min-entropy rate is 24 bits of min-entropy per 64-bit sample from the RNG.

Table 12 - Private Keys and CSPs

Name	Desc	cription and Usage			
		HSM CSPs			
DRBG Entropy		Entropy Input for CTR_DRBG, taken from NDRNG (length varies)			
CTR_DRBG Internal State & S	Seed	V (128 bits) and Key (256 bits) internal state values and Seed for CTR_DRBG			
Manufacturer FIPS Data		AES 256-bit key used to encrypt manufacturer keys stored in persistent storage			
Encryption Key (MFDEK)		of the HSM.			
HSM Master Partition Maste Encryption Key	er	AES 256-bit key used to encrypt Master Partition CSPs and authentication data stored in persistent storage of the HSM.			
Partition Master Encryption (PMEK)	Key	AES 256-bit key used to encrypt partition CSPs and authentication data stored in persistent storage of the HSM.			
HSM FIPS Master Authentica Key (FMAK)	ition	A unique 2048-bit RSA private key. Used to identify the HSM when in the FIPS operating mode			
Partition Authentication Key (PAK)	,	A unique 2048-bit RSA private key used to identify the HSM Partition			
		Authentication CSP			
PswdEncKey RSA Private Key	2048-bit RSA Private Key, used in SP 800-56B KAS to generate PswdEncKey				
PswdEncKey	AES-256 key, for encrypting User passwords during user creation and authentication				
Login Passwords	String of 7 to 32 alphanumeric characters				
	_	Key Loading CSPs			
Partition's KeyLoading Private Key		512-bit or RSA 2048-bit key used in SP 800-56A C(0,2,ECC DH) or SP 800-56B 2 to agree on Z during key loading			
Partition's KeyLoading Shared Secret (Z)	Shared secret Z for SP 800-56A C(0,2,ECC DH) or SP 800-56B KAS2				
Partition's Key Loading Key (KLK)	A 256-bit AES key derived from Z, used to decrypt the imported CSPs				
		Backup and Restore Keys			
Manufacturer FIPS Key Backup Key (MFKBK)	AES 256-bit key used to derive KBK				
HSM Owner KBK (OKBK)	AES 256-bit key used to derive KBK				
Partition Owner KBK (POKBK)	AES 256-bit key used to derive KBK				
HSM Key Backup Key (KBK)	Key used to encrypt/decrypt the Backup Session Key				
Backup Session Key	Key used to backup and restore partition data				

Name	Description and Usage
	Cloning Keys
Partition's Cloning Private Key	ECC 512-bit or RSA 2048-bit Static Private Key used in SP 800-56A C(0,2,ECC DH) or SP 800-56B KAS2-bilateral-confirmation key agreement to generate shared secret Z. At HSM Partition level, used to establish secure channel for cloning process (to export Masking Key).
Partition's Cloning Shared Secret (Z)	Shared secret Z for SP 800-56A C(0,2,ECC DH) or SP 800-56B KAS2 -bilateral - confirmation scheme.
Partition's Cloning Session Key	AES 256 key for encryption and decryption of Masking Key.
Partition's Cloning Session MAC Key	HMAC SHA256 key used for key confirmation during SP 800-56A key agreement
Partition's Masking Key	AES-256 key, for key wrapping. Used to import/export CSPs and masked objects.
	General Purpose User CSPs
Asymmetric Private Keys	RSA/DSA/ECDSA/ECDH general purpose keys
Asymmetric Private Session Keys	RSA/DSA/ECDSA/ECDH general purpose session keys
Symmetric Keys	Triple-DES or AES general purpose keys
Symmetric Session Keys	Triple-DES or AES general purpose session keys
HMAC Keys	HMAC general purpose keys (minimum key size of 160 bits)
HMAC Session Keys	HMAC session general purpose keys (minimum key size of 160 bits)
TLS Session ECDH Key	Used for key agreement as part of TLS-1.0/1.1/1.2 handshake protocol
TLS Session Symmetric Key Set	AES 128, 192, 256 or Triple-DES keys used for encrypting TLS sessions
TLS Session HMAC key	HMAC key used in SSL session (minimum key size of 160 bits)
EAP-FAST-PAC	EAP-FAST authentication Info
TLS KDF States	TLS Pre-Master Secret (size varies) and TLS Master Secret (384 bits); used to generate TLS session keys
	E2E Session Keys
E2E TLS Session Symmetric Key Set	AES 256 Key used for encrypting/decrypting E2E session data
E2E TLS Session HMAC keys	HMAC keys used in E2E session

8.2 Definition of Public Keys

The module contains the following public keys:

Table 13 – Public Keys

Name	Description and Usage
	HSM Keys
Manufacturer Firmware	RSA 2048-bit public key used to authenticate SW images loaded into the module.
Validation Key	The SW image is signed by the manufacturer using an RSA private key and the
	signature is verified before upgrading to the new image using the public key.

Name D	escription and Usage
Manufacturer Debug Firmware Validation Key	RSA 2048-bit public key used to authenticate debug enabled SW images loaded into the module. The SW image is signed by the manufacturer using a RSA private key and the signature is verified before upgrading to the new image using this public key. On successful upgrade HSM is zeroized before booting into debug image.
Manufacturer License Validation Key	RSA 2048-bit public key used to authenticate the manufacturer role.
Manufacturer Authentication Root Cert. (MARC)	RSA 2048-bit public key certificate, used to issue FMAC certificates.
HSM FIPS Master Authentication Certificate (FMAC)	RSA 2048-bit public key certificate of FMAK. Used to identify the HSM FIPS operating mode.
SecureBootAuth Public Key	RSA 2048-bit public key used to verify authenticity of the host system,
	Administrative Keys
HSM/Adapter Owner Trust Anchor Certificate (AOTAC)	RSA 2048-bit public key certificate used as trust anchor of MCO.
HSM/Adapter Owner Authentication Certificate (AOAC)	RSA 2048-bit public key certificate of FMAK. Used to identify the HSM owner.
Partition Authentication Certificate (PAC)	RSA 2048-bit public key certificate of PAK. Used to identify the Partition.
Partition Owner Trust Anchor Certificate (POTAC)	RSA 2048-bit public key certificate used as trust anchor of PCO.
Partition Owner Authentication Certificate (POAC)	RSA 2048-bit public key certificate of PAK. Used to identify the Partition owner.
	Key Backup/Cloning Keys
Partition Cloning/KLK Initiator Public Key	ECC 512-bit static public key used in SP 800-56A C(0,2,ECC DH) key agreement or RSA 2048-bit static public key used in SP 800-56B KAS2 -bilateral -confirmation key agreement to generate shared secret Z.
Partition Cloning/KLK Responder Public Key	ECC 512-bit static public key used in SP 800-56A C(0,2,ECC DH) key agreement or RSA 2048-bit static public key used in SP 800-56B KAS2 -bilateral -confirmation key agreement to generate shared secret Z.
Partition Cloning ECC Domain Parameter Set	Set EE per SP 800-56A Table 2.
	Authentication Keys
Partition PswdEncKey Public Key	RSA 2048-bit public key generated by the partition to be used in SP 800-56B key agreement to generate PswdEncKey.
Host PswdEncKey Public Key	RSA 2048-bit public key loaded by the host to be used SP 800-56B key agreement to generate PswdEncKey.
Two-Factor Authentication Public Key or MofN authentication Key	RSA 2048-bit public key used to verify signature on encrypted passwords during user creation and login and/or to verify signatures on MofN authentication tokens.
	General Purpose Keys
User Public Keys	RSA/DSA/ECDSA/ECDH public keys
User Public Session Keys	RSA/DSA/ECDSA/ECDH public session keys

8.3 Definition of Session Keys

The cryptographic module supports the generation/import/export of user keys which are bound to a session and are termed as session keys. The following points apply to the session keys:

- Session keys are stored in RAM and are lost across reboots.
- Session key access is restricted to an application in which it is created. PCU can share the session keys with other users, in that case other sessions can use it.
- Every session in an application will have access to the keys created by every other session in the same application.
- When a session is closed, the session keys created by that session get destroyed. If the key is shared, then it will be deleted only after closing all the sessions sharing this key.

9 Operational Environment

The module implements a limited operational environment. FIPS 140-2 Area 6 Operational Environment requirements do not apply to the module in this validation.

10 Security Rules

This section documents the security rules enforced by the cryptographic module to implement the security requirements of this FIPS 140-2 Level-3 module.

- 1. The cryptographic module clears previous authentications on power cycle.
- 2. When the module has not been placed in a valid role, the operator shall not have access to any cryptographic services.
- The cryptographic module shall perform the following power-up, continuous and conditional selftests:

A. Power-Up Tests

- AES (CBC and ECB) Encrypt & Decrypt KATs (NitroxIII, Cert. #2034)
- AES (GCM) Encrypt & Decrypt KATs (NitroxIII, Cert. #2035)
- AES (ECB) Encrypt & Decrypt KATs (NitroxIII, Cert. #2033)
- HMAC SHA-1, 224, 256, 384, 512bits KATs (NitroxIII, Cert. #1233)
- TLS 1.0/1.1/1.2 KDF KAT (NitroxIII, CVL Cert. #167)
- SHA-1 KATs (NitroxIII, Cert. #1780)
- Triple-DES (TCBC) Encrypt & Decrypt KATs (NitroxIII, Cert. #1311)
- Triple-DES (TECB) Encrypt & Decrypt KATS (Firmware, Cert. #2242)
- AES (ECB) Encrypt & Decrypt KAT (Firmware, Cert. #3205)
- SP 800-38F AES Key Wrap Encrypt & Decrypt KATs (Firmware, Cert. #3206)
- SP 800-38F AES Key Wrap Encrypt & Decrypt KATs (Firmware, Cert. #4104)
- SP 800-90A CTR_DRBG KAT (Firmware, Cert. #680)
- DSA Sig Gen, Sig VerKATs (Firmware, Cert. #916)
- ECDSA Sig Gen and Sig Ver KATs (Firmware, Cert. #589)
- HMAC-SHA-1, 224, 256, 384, 512 KATs (Firmware, Cert. #2019)
- KAS KAT per IG 9.6 (Q=dG and KDF) (Cert. #53)
- RSA Sig Gen, Sig Ver and Key Gen KATs (Firmware, Cert. #1634)
- RSA (Sig Gen, Sig Ver KATS (Firmware, Cert. #2218)
- SP 800-38F Triple-DES Key Wrap Encrypt & Decrypt KATs (Firmware, Cert. #2242)
- SHA-1KAT (Firmware, Cert. #2652)
- RSA Encrypt & Decrypt KAT
- Firmware integrity test (CRC-16)
- ECDH KAT (NitroxIII, CVL Cert. #563)
- SP800-108 HMAC-SHA-256 KBKDF (Firmware, Cert. #65)

B. Conditional Self-Tests

- ECDSA Pairwise Consistency Test
- RSA Pairwise Consistency Test
- DSA Pairwise Consistency Test
- SP 800-90A CTR_DRBG Continuous number test
- HW RNG Continuous Number Test
- Firmware load test (RSA Signature Verification) RSA 2048-SHA512

- DRBG, SP800-90A health tests.
- 4. Critical Functions Tests: The module runs the following Critical Functions Tests which are required to ensure the correct functioning of the device.
 - a. Power On Memory Test
 - b. EEPROM Test
 - c. NOR Flash Test
 - d. Nitrox Chips Tests
- 5. The operator shall be capable of commanding the module to perform the power up self-test by cycling power or resetting the module.
- 6. Power up self-tests do not require any operator action.
- 7. Data output shall be inhibited during self-tests, zeroization, and error states.
- 8. Status information does not contain CSPs or sensitive data that if misused could lead to a compromise of the module.
- 9. There are no restrictions on which keys or CSPs are zeroized by the zeroization service.
- 10. The module does not support a maintenance interface or role.
- 11. The module does not support bypass capabilities.
- 12. The module does not support manual key entry.
- 13. The module has no CSP feedback to operators.
- 14. The module does not enter or output plaintext CSPs
- 15. The module does not output intermediate key values.
- 16. The module shall be configured for FIPS operation by following the first-time initialization procedure described in Section 3.2.1 of the User Manual (CNN35XX-NFBE FIPS SW User Guide Rev1.1).
 - a. Start the Cfm2MasterUtil
 - b. Set the fips state flag to 2 or 3
 - c. Generate a shared Password Encryption Key
 - d. Create a new MCO/HSM Admin
 - e. Enter the completion command listed in 3.2.1.6 of the User Guide
- 17. The user must restrict the use of Triple-DES as per FIPS IG §A.13. A Triple-DES key must not be used for more than 2²⁰ encryption operations (roughly 8.38MB) for IETF protocols, such as TLS (Per RFC's 2246, 4346, 5246), or 2¹⁶ encryption operations (roughly 524kB) for other use-cases. (This provision is subject to change; please refer to NIST.gov for the current restrictions.) This is allowed to be procedural at Level 3 as per IG A.13.

11 Physical Security Policy

11.1 Physical Security Mechanisms

The physical boundary of the module is the outer perimeter of the card itself. The module is opaque and completely conceals the internal components of the cryptographic module. The epoxy enclosure of the module prevents physical access to any of the internal components without having to destroy the module. There are no operator required actions.

<u>Note</u>: The module's hardness testing was only performed at ambient temperature (23°C); no assurance is provided for Level 3 hardness conformance at any other temperature.

12 Mitigation of Other Attacks Policy

No mitigation of other attacks is implemented by the module.

13 References

- 1. NISTKey Wrap Specification, SP 800-38F, December 2012
- 2. NIST Special Publication 800-56A, March, 2007.
- 3. NIST Special Publication 800-56B, August, 2009.
- 4. NIST Special Publication 800-57 Part-1, May 2006.
- 5. FIPS PUB 186-4, Digital Signature Standard (DSS), July, 2013
- 6. FIPS PUB 140-2, FIPS Publication 140-2 Security Requirements for Cryptographic Modules
- 7. Implementation Guidance for FIPS PUB 140-2 and the Cryptographic Module Validation Program
- 8. NIST Special Publication 800-131Ar1, November, 2015.
- https://support.cavium.com/websilo/document/JmlfaWQ9OTQ3MCZwX2lkPTc0MAAA CNN35XX-NFBE FIPS SW User Guide Rev1.1

14 Definitions and Acronyms

MCO - Master Crypto Officer

PCO – Partition Crypto Officer

PCU - Partition Crypto User

HSM - Hardware Security Module

KBK – Key Backup Key

KLK – Key Loading Key

KAT - Known Answer Test

KAS – Key Agreement Scheme

15 Appendix A: Supported ECC curves for Sig-Verify

Curves over prime number fields: P-192, P-224, P-256, P384, P-521.

Koblitz curves over 2^m fields: K-163, K-233, K-283, K-409, K-571.

Curves over 2^m fields: B-163, B-233, B-283, B-409, B-571.

16 Appendix B: Supported ECC curves for Key-Gen and Sig-Gen

Curves over prime number fields: P-224, P-256, P384, P-521.

Koblitz curves over 2^m fields: K-233, K-283, K-409, K-571.

Curves over 2^m fields: B-233, B-283, B-409, B-571.